Velotric Nomad 1 VELOTRIC

Quick Start Guide

We highly recommend that you to follow along this video tutorial to assemble your bike. Simply scan the QR code below.



Or visit: velotricbike.info/nomad1

Contents

This guide will get your new bike set up and ready to ride.


- What's in the Toolkit
- Bike Assembly
- Bike Diagram

What's in the Toolkit What's in the Toolkit



Tool Bag

- a Socket Wrench
- Phillips Screwdriver
- M15/M8 Wrench
- d M10 Wrench
- e M6/M5/M4/M3/M2.5 Hex Key

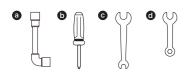







Spare bolts

- a Front Hub Cap / Washer × 2
- 6 Stem Clamp Bolt × 2
- C Display Panel Bracket Bolt × 2
- Display Panel Mount Bolt × 2
- Fender Bolt × 1














Left / Right Pedal

Front / Rear Reflector

Bell

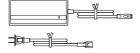





Adapter & Charging Cable

Display

Front Light








Kickstand

Hub Cap

Cable Binder

Step 1 Kickstand Bike Assembly Bike Assembly

- 1. Put on the hub cap.
- 2. Unscrew the bolts for the kickstand with the M5 hex key.
- 3. Attach the kickstand and tighten the bolts.

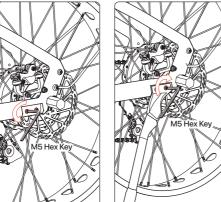



- - 1. Remove the four bolts on the clamp with the M4 hex key and install the handlebar.
- 2. Adjust the handlebar by aligning the reference marks.
- 3. Tighten the four bolts in the order illustrated below.

Step 2 Handlebar





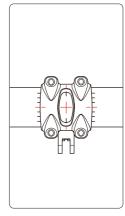

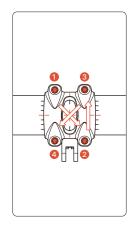



Step 3 Front Wheel Bike Assembly


Step 3 Front Wheel Bike Assembly

- 1. Open the quick release lever.
- 2. Uscrew the quick release knob, and remove the quick release from the fork protective tray.
- 3. Remove the spacer from the brake caliper.

A NOTE The quick release is ONLY for this fork protection tray as a protection setup for transportation. You may trash it while unboxing. The quick release is NOT for Front Wheel assembly.

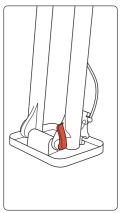


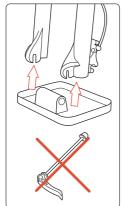


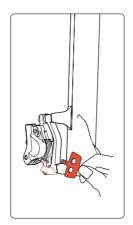


- 4. Insert the front wheel to the front fork. Seat the hub axle into the dropouts.
- 5. Tighten and secure the front hub cap with the socket wrench (Torque 30-35 Nm).
- 6. Ensure the rotor is wellpositioned (with gap) inside the brake caliper.

- ▲ NOTE 1. Torque can be measured by using a torque wrench.
 - 2. Be careful not to accidentally squeeze the brake levers before this step. Otherwise you may cause misalignment on your hydraulic brakes.

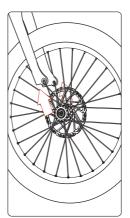


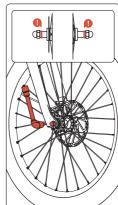


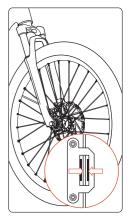

Step 4 Front Fender Bike Assembly Bike Assembly Step 5 Pedals


- Unscrew the bolts that affix the front fender to the fork top.
- 2. Attach the support rods to the fork legs with the M4 hex key.
- Adjust the fender to your own preference. Ensure the wheel is centered and the gap between the fender and the wheel is clear. Fasten the bolts.

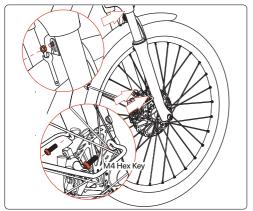


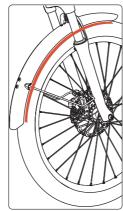

- Attach the right pedal to the right crankset by turning the pedal CLOCKWISE (see below).
- 2. Tighten the pedal with the M15 wrench.

- Attach the left pedal to the left crankset by turning the pedal COUNTER-CLOCKWISE (see below).
- Tighten the pedal with the M15 wrench.

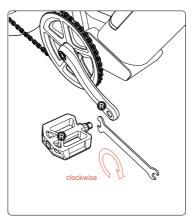

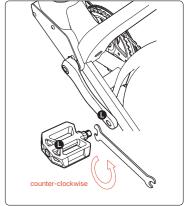


Step 6 Front Light

Bike Assembly

embly Bike Assembly


- 1. Attach the front light to the mount.
- Fix the light to a desirable angle with the Phillips screwdriver and M8 wrench.
- 3. Connect the two front light cables (in red) as shown below.




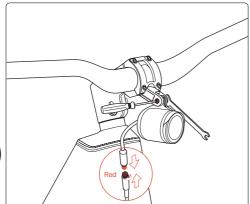

- Unscrew the bolts on the mounting brackets of the display.
- 2. Mount the display panel onto the handlebar and adjust it to an angle you can view easily on the seat in a riding position. Tighten the bolts with the M3 hex key.
- Connect the display cables (marked green and blue) as shown below.
- Wrap the display wires together with the connected front light cable with the cable binder.




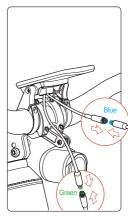


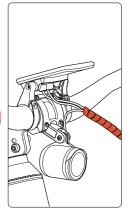


- Unscrew the bolt on the bell mount and install the bell. Adjust the angle before tightening the bolt.
- Unscrew the bolt on the reflector mount and install the reflector. Adjust the angle before tightening the bolt.
- Attach the rear reflector to the seat post. Adjust the angle before tightening the bolt.


▲ NOTE You can position the bell and reflector according to your preference.

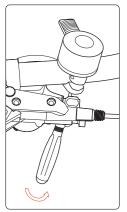


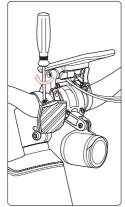

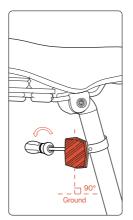

- 1. Adjust the stem to make the handlebar perpendicular to the front wheel.
- 2. Tighten the bolts on both sides of the stem.

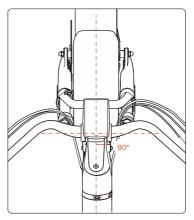

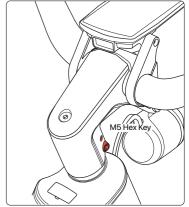

14


Step 10 Battery

Bike Assembly

Bike Assembly


Step 11 Charging


- Fit the battery into the down tube.
- Insert the key into the battery lock.
- 3. Press firmly to nest the battery and turn the key clockwise to lock it in place.

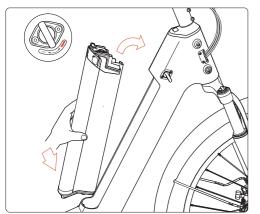



- The battery can be charged either in or out of the bike. Power off the bike before charging the battery in the bike.
- Make sure the battery is placed on a flat and clear surface. Plug the DC power cord (barrel connector) into the port.
- 3. Plug the adapter into the wall. The LED indicator will turn red.
- The indicator will turn green when the battery is fully charged. Unplug the adapter first before pulling out the cord from the battery.
- ▲ WARNING 1. Charge the battery in an environment from 50–86°F (10–30°C).
 - 2. The battery won't charge when it is over 113°F (45°C) or below 32°F (0°C). Let the battery adjust to room temperature for at least 1 hour before trying again.

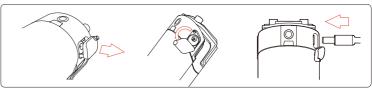

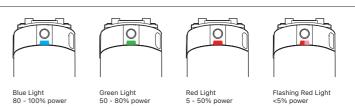


Step 12 Start Your Bike


Bike Assembly

Bike Assembly

Step 13 Test the Features

- Peel the protective film off the display screen.
- 2. Hold the on/off button to power on/off the bike.
- Our system provides different levels of pedal assistance (1 = lowest, 5 = highest) so you can adapt the power output depending on your riding needs. Level 0 means no pedal assist.

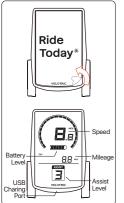

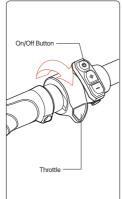

Assist level 1

Eco Mode: Minimal power output for maximum battery efficiency.

Assist level 2

Tour Mode: Low power output for riding long distances.

Assist level 3

Normal Mode: Medium power output for city commuting.

Assist level 4


Sport Mode: Strong power output for active riding.

Assist level 5

Turbo Mode: Maximum power output for extreme riding.


When the display is on:


- 1. Hold the "+" button to turn on the **front light**. The display will dim automatically. Hold the "+" again to turn off the light, and the display lights up again.
- 2. Press "+/-" to shift the pedal assist level up or down.
- 3. Hold the "-" button to turn on Walk Mode at 2.5mph (4km/h). Release the button to turn off Walk Mode.

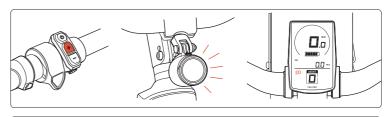





Always check your tires before a ride. If the tires seem soft or spongy, pump them up to the pressure indicated on the side of the tire.

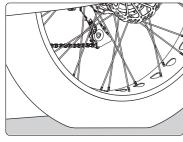

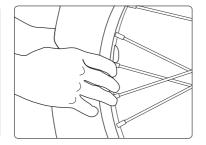

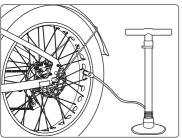

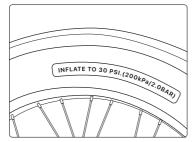



- Front Light
- Handlebar
- Stem
- Saddle Seatpost
- Seatpost Clamp

- Motor
- Cassette
- Rear Derailleur
- Chain
- Crankset
- Pedal

- Battery
- Brake Rotor
- Brake Caliper
- Tire
- Suspension Fork

Bike Diagram



Brake Lever
 Throttle

- 9
- Oisplay

- Remote
- d Bel
- Shifter
- Grip

Define Your Adventure.

VELOTRIC

Contact

Website: www.velotricbike.com E-mail: help@velotricbike.com Phone: +1888-559-3099

Hours: Monday-Friday, 7AM-6PM PST